


### CONTENTS

- Introduction ..... 1
- Mount Controller ..... 1
- Connect Sensors and Equipment ..... 2
- Connect (Opt.) Pressure Flow Sensor ..... 3
- Connect (Opt.) Ethernet Network ..... 3
- Connect Power ..... 3
- Power and Communication Status ..... 4
- Configure/Program the Controller ..... 5
- Sample (BAC-9311ACE) Wiring ..... 6
- Input/Output Objects/Connections ..... 7
- Replacement Parts ..... 9
- Important Notices ..... 9

**NOTE:** The black terminals are for power. The green terminals are for inputs and outputs. .

2. Screw a #6 sheet metal screw through each corner of the **controller 2**.

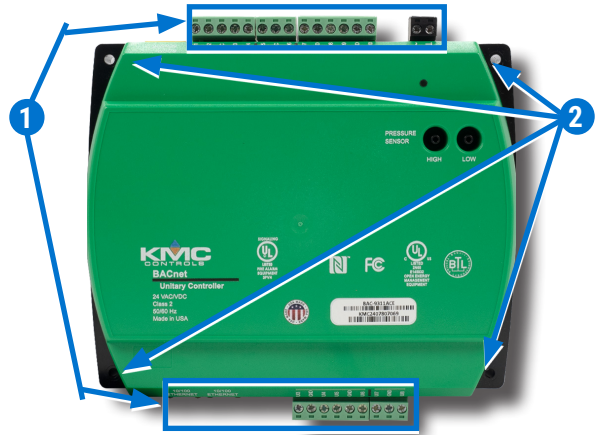

### INTRODUCTION

Complete the following steps to install a KMC Conquest™ BAC-9300ACE Series Unitary Controller. For controller specifications, see the **data sheet** at [kmcccontrols.com](http://kmcccontrols.com). For additional information, see the **KMC Conquest Controller Application Guide**.


### MOUNT CONTROLLER

**NOTE:** Mount the controller inside a metal enclosure for RF shielding and physical protection.

**NOTE:** To mount the controller with **screws** on a flat surface, complete the steps in **On a Flat Surface on page 1**. Or to mount the controller on a 35 mm **DIN rail** (such as integrated in an **HCO-1103** enclosure), complete the steps in **On a DIN Rail on page 1**.

### On a DIN Rail

1. Position the **DIN rail 3** so that when the controller is installed the color-coded terminal blocks are easy to access for wiring.
2. Pull out the **DIN Latch 4** until it clicks once.
3. Position the controller so that the top **four tabs 5** of the back channel rest on the DIN rail.

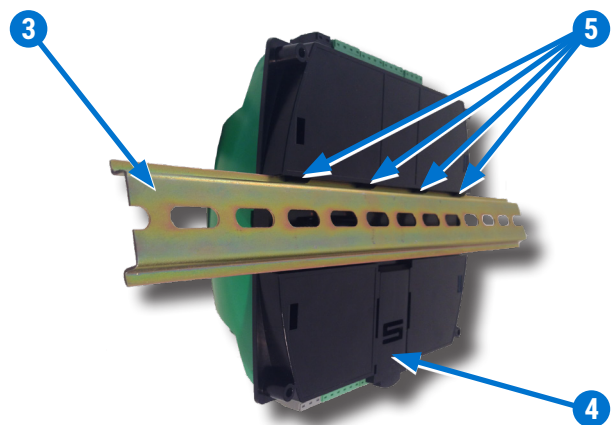


4. Lower the controller against the DIN rail.

### On a Flat Surface

1. Position the controller so the color-coded **terminal blocks 1** are easy to access for wiring.

5. Push in the **DIN Latch** **6** to engage the DIN rail.

**NOTE:** To remove the controller, pull the DIN Latch until it clicks once and lift the controller off the DIN rail.

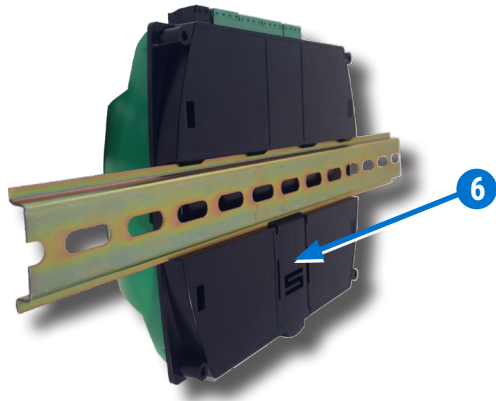

1. Plug an **Ethernet patch cable** **7** connected to an STE-9000 Series or STE-6010/6014/6017 sensor into the (yellow) **ROOM SENSOR port** **8** of the controller.

**NOTE:** The Ethernet patch cable should be a maximum of 150 feet (45 meters).

**CAUTION**

On Conquest "E" models, do NOT plug a cable meant for Ethernet communications into the Room Sensor port! The Room Sensor port powers a NetSensor, and the supplied voltage may damage an Ethernet switch or router.

**CONNECT SENSORS AND EQUIPMENT**

**NOTE:** See **Sample (BAC-9311ACE) Wiring on page 6** and **Input/Output Objects/Connections on page 7** for more information. See also the BAC-9300 series videos in the **KMC Conquest Controller Wiring** playlist.


**NOTE:** A digital **STE-9000 Series NetSensor** can be used for configuring the controller (see **Configure/Program the Controller on page 5**). After the controller has been configured, an **STE-6010**, **STE-6014**, or **STE-6017** analog sensor can be connected to the controller in place of the NetSensor. See the relevant installation guide for additional details.



2. Wire any additional sensors to the **green (input) terminal block** **10**. See **Sample (BAC-9311ACE) Wiring on page 6**.

**NOTE:** Wire sizes 12–24 AWG can be clamped in each terminal.

**NOTE:** No more than two 16 AWG wires can be joined at a common point.

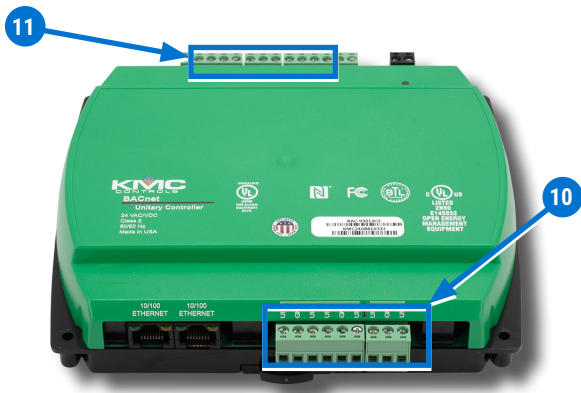

- Wire additional equipment (such as fans, heaters, dampers, and valves) to the **green (output) terminal block 11**. See [Sample \(BAC-9311ACE\) Wiring on page 6](#).

**CAUTION**

Do **NOT** connect 24 VAC to the analog outputs (U07–U010 and GNDs)!

**NOTE:** Use 24 VAC (only) with triac outputs (B01–B06 with SCs).


**CONNECT (OPT.) PRESSURE FLOW SENSOR**

**NOTE:** Complete the steps in this section to connect an air flow sensor to the BAC-9311ACE controller.

**NOTE:** BAC-9301ACE controllers do **not** have PRESSURE SENSOR ports.

**NOTE:** Use 1/4 inch (6.35 mm) FR tubing. Tubing should not be longer than 6 feet (20 meters).

- Remove the **black shipping plugs 9** from the PRESSURE SENSOR ports.
- Connect the high pressure tube from the pressure flow sensor to the **HIGH 12** port on the controller.
- Connect the low pressure tube from the pressure flow sensor to the **LOW 13** port on the controller.

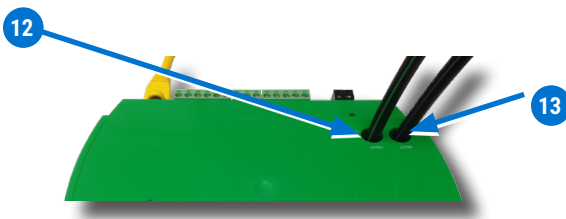

**CONNECT (OPT.) ETHERNET NETWORK**

- For BAC-93x1ACE models, connect an **Ethernet patch cable 14** to the **10/100 ETHERNET** port.

**CAUTION**


On Conquest “E” models, do **NOT** plug a cable meant for Ethernet communications into the Room Sensor port! The Room Sensor port powers a NetSensor, and the supplied voltage may damage an Ethernet switch or router.

**NOTE:** The Ethernet patch cable should be T568B Category 5 or better and a maximum of 328 feet (100 meters) between devices.

**NOTE:** The Dual Ethernet ports enable daisy-chaining of controllers **14**. See the [Daisy-Chaining Conquest Ethernet Controllers Technical Bulletin](#) for more information.

**NOTE:** On newer models, the Room Sensor port is yellow **8** instead of black to help differentiate it from the black Ethernet ports.

**NOTE:** For more information, see [Sample \(BAC-9311ACE\) Wiring on page 6](#) and the BAC-9300 series videos in the [KMC Conquest Controller Wiring](#) playlist.

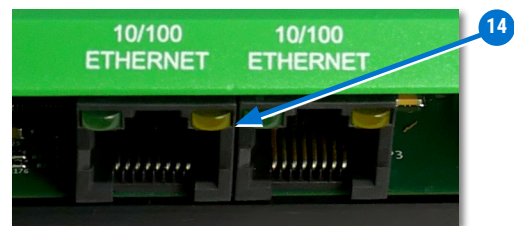

**CONNECT POWER**

**NOTE:** Follow all local regulations and wiring codes.

- Connect a 24 VAC, Class-2 transformer to the **black power terminal block** of the controller.
  - Connect the neutral side of the transformer to the controllers **common terminal ⊥ 17**.
  - Connect the AC phase side of the transformer to the controllers **phase terminal ~ 18**.



**NOTE:** Connect only one controller to each transformer with 12–24 AWG copper wire.

**NOTE:** Use either shielded connecting cables or enclose all cables in conduit to maintain RF emissions specifications.

**NOTE:** For more information, see **Sample (BAC-9311ACE) Wiring on page 6** and the BAC-9300 series videos in the **KMC Conquest Controller Wiring** playlist.



### Green ETHERNET LED 20

**NOTE:** The Ethernet status LEDs indicate network connection and communication speed.

- The green Ethernet LED stays ON when the controller is communicating with the network.
- The green Ethernet LED is OFF when the (powered) controller is **not** communicating with the network.


## POWER AND COMMUNICATION STATUS

The **status LEDs** indicate power connection and network communication. The following descriptions explain their activity during **normal operation** (at least 5 to 20 seconds **after** power-up/initialization or restart).

**NOTE:** If both the green READY LED and the amber COMM LED remain OFF, check the power and cable connections to the controller.

### Green READY LED 19

After controller power-up or restart is complete, the READY LED flashes steadily about once per second, indicating normal operation.

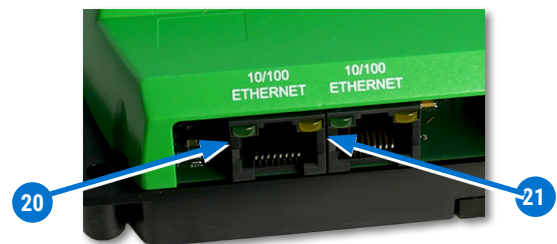

### Amber ETHERNET LED 21

- The amber Ethernet LED flashes when the controller is communicating with a 100BaseT Ethernet network.
- The amber Ethernet LED remains OFF when the (powered) controller is communicating with the network at only 10 Mbps (instead of 100 Mbps).

**NOTE:** If both the green and amber Ethernet LEDs remain OFF, check the power and network cable connections.

## CONFIGURE/PROGRAM THE CONTROLLER

See the table for the most relevant KMC Controls tool for configuring, programming, and/or creating graphics for the controller. See the documents or Help systems for the respective KMC tool for more information.

See the table (on the next page) for the most relevant KMC Controls tools for configuring, programming, and/or creating graphics for the controller. See the tools' documents or Help systems for more information.

**NOTE:** After the controller has been configured, an STE-6010/6014/6017 series analog sensor can be connected to the controller in place of an STE-9000 series digital NetSensor.

**NOTE:** A BAC-9301CE can be configured by connecting an HTML5-compatible web browser to the controller's default IP address (192.168.1.251). See the [Conquest Ethernet Controller Configuration Web Pages Application Guide](#) for more information about the built-in configuration web pages.

**NOTE:** To configure a VAV controller, enter the correct **K factor** for the VAV box. Typically, this is supplied by the manufacturer of the VAV unit. If this information is unavailable, use an approximate K factor from the chart in the Appendix: K Factors for VAV section in the [KMC Conquest Controller Application Guide](#).


For instructions on **VAV balancing**:

- With an **STE-9000** series NetSensor, see the VAV Airflow Balancing with an STE-9xx1 section of the [KMC Conquest Controller Application Guide](#).
- With a **BAC-5051E Router**, see its [application and installation guide](#).
- With **KMC Connect** or **TotalControl**, see the Help system for the software.

SETUP PROCESS			KMC CONTROLS TOOL
Configuration	Programming (Control Basic)	Web Page Graphics*	
✓			Conquest Net-Sensor
✓			Internal configuration web pages in Conquest Ethernet "E" models**
✓			KMC Connect Lite™ (NFC) app***
✓	✓		KMC Connect™ software
✓****	✓****	✓	TotalControl™ software
✓	✓		KMC Converge™ module for Niagara Workbench
		✓	KMC Converge <b>GFX</b> module for Niagara Workbench
<p>*Custom graphical user-interface web pages can be hosted on a remote web server, but not in the controller.</p> <p>**Conquest Ethernet-enabled "E" models with the latest firmware can be configured with an HTML5 compatible web browser from pages served from within the controller. For information, see the <a href="#">Conquest Ethernet Controller Configuration Web Pages Application Guide</a>.</p> <p>***Near Field Communication via enabled smart phone or tablet running the KMC Connect Lite app.</p> <p>****Full configuration and programming of KMC Conquest controllers is supported starting with TotalControl ver. 4.0.</p>			

# SAMPLE (BAC-9311ACE) WIRING

## (Single Duct VAV, Series Fan Powered with Modulating Reheat and Vent Control)

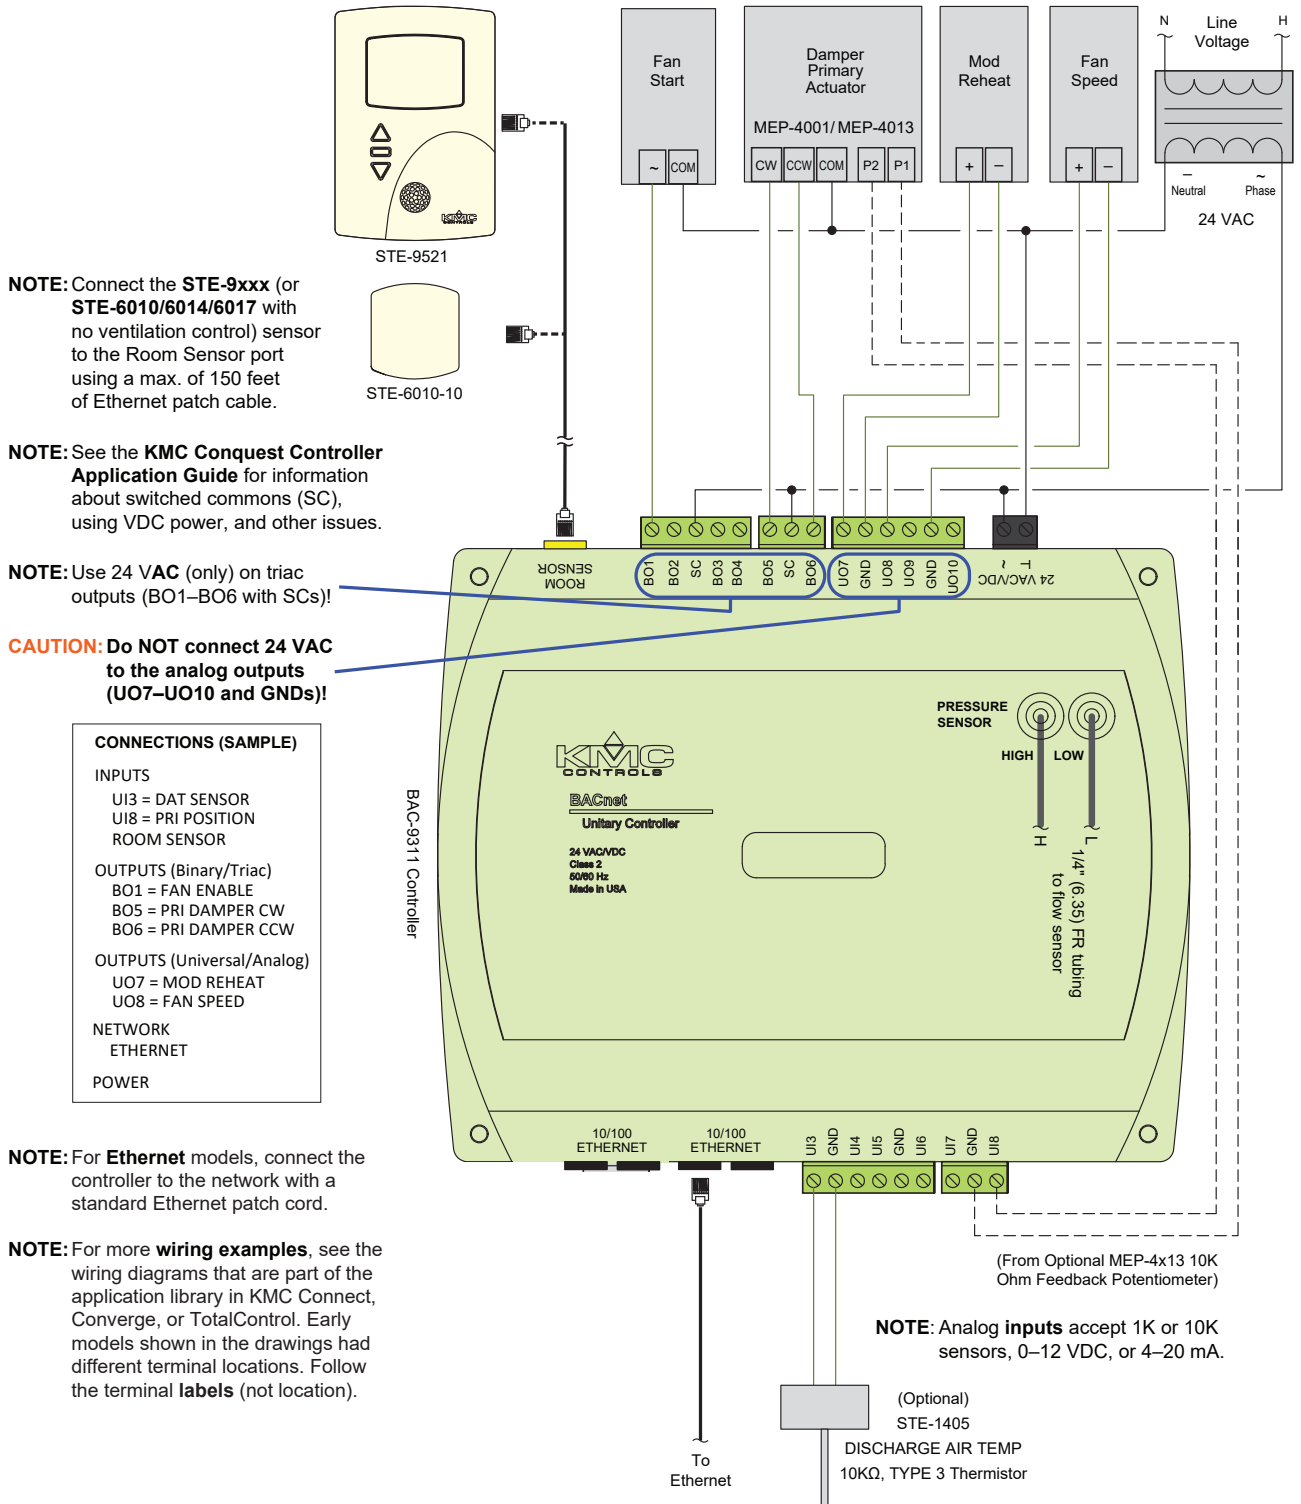

## INPUT/OUTPUT OBJECTS/CONNECTIONS

<b>BAC-9301ACE FCU (2-PIPE)</b>	
<b>Inputs</b>	
AI1	Space Sensor ( <i>on Room Sensor port</i> )
AI2	Space Setpoint Offset ( <i>on port</i> )
AI3/UI3	Discharge Air Temperature
AI4/UI4	Outdoor Air Temp
AI5/UI5	Space Humidity
AI6/UI6	Supply Water Temperature
AI8/UI8	Analog Input #8
BI7/UI7	Fan
<b>Outputs</b>	
A07/U07	Analog Heat/Cool Valve (Proportional)*
A08/U08	Auxiliary Heat (Proportional)**
A09/U09	Analog Output #9
A010/U010	Fan Speed Control
B01	Fan Low Speed
B02	Fan Medium Speed
B03	Fan High Speed
B04	Binary Heat/Cool Valve (On/Off)*
B05	Auxiliary Heat (On/Off)**
B06	Binary Output #6
*A07 and B04 are controlled simultaneously.	
**A08 and B05 are controlled simultaneously.	

<b>BAC-9301ACE FCU (4-PIPE)</b>	
<b>Inputs</b>	
AI1	Space Sensor ( <i>on Room Sensor port</i> )
AI2	Space Setpoint Offset ( <i>on port</i> )
AI3/UI3	Discharge Air Temperature
AI4/UI4	Outdoor Air Temp
AI5/UI5	Space Humidity
AI7/UI7	Analog Input #7
AI8/UI8	Analog Input #8
BI6/UI6	Fan
<b>Outputs</b>	
A07/U07	Analog Cooling Valve (Proportional)*
A08/U08	Analog Heating Valve (Proportional)**
A09/U09	Analog Output #9
A010/U010	Fan Speed Control
B01	Fan Low Speed
B02	Fan Medium Speed
B03	Fan High Speed
B04	Binary Cooling Valve (On/Off)*
B05	Binary Heating Valve (On/Off)**
B06	Binary Output #6
*A07 and B04 are controlled simultaneously.	
**A08 and B05 are controlled simultaneously.	

<b>BAC-9301ACE HPU</b>	
<b>Inputs</b>	
AI1	Space Sensor ( <i>on Room Sensor port</i> )
AI2	Space Setpoint Offset ( <i>on port</i> )
AI3/UI3	Discharge Air Temperature
AI4/UI4	Outdoor Air Temp
AI5/UI5	Space Humidity
AI7/UI7	Analog Input #7
AI8/UI8	Analog Input #8
BI6/UI6	Fan
<b>Outputs</b>	
A07/U07	Analog Output #7
A08/U08	Analog Output #8
A09/U09	Economizer Output
A010/U010	Analog Output #10
B01	Fan Start - Stop
B02	Stage 1 Compressor
B03	Stage 2 Compressor
B04	Reversing Valve
B05	Auxiliary Heat
B06	Binary Output #6

<b>BAC-9311ACE HPU</b>	
<b>Inputs</b>	
AI1	Space Sensor ( <i>on Room Sensor port</i> )
AI2	Space Setpoint Offset ( <i>on port</i> )
AI3/UI3	Discharge Air Temperature
AI4/UI4	Outdoor Air Temp
AI5/UI5	Space Humidity
AI7/UI7	Analog Input #7
AI8/UI8	Analog Input #8
AI9	Duct Pressure ( <i>internal sensor</i> )
BI6/UI6	Fan
<b>Outputs</b>	
A07/U07	Analog Output #7
A08/U08	Analog Output #8
A09/U09	Economizer Output
A010/U010	Analog Output #10
B01	Fan Start - Stop
B02	Stage 1 Compressor
B03	Stage 2 Compressor
B04	Reversing Valve
B05	Auxiliary Heat
B06	Binary Output #6

<b>BAC-9301ACE RTU</b>	
<b>Inputs</b>	
AI1	Space Sensor ( <i>on Room Sensor port</i> )
AI2	Space Setpoint Offset ( <i>on port</i> )
AI3/UI3	Discharge Air Temperature
AI4/UI4	Outdoor Air Temp
AI5/UI5	Space Humidity
AI7/UI7	Analog Input #7
AI8/UI8	Analog Input #8
BI6/UI6	Fan
<b>Outputs</b>	
A07/U07	Analog Cooling Output
A08/U08	Analog Heating Output
A09/U09	Economizer Output
A010/U010	Analog Output #10
B01	Fan Start - Stop
B02	Cool Stage 1
B03	Cool Stage 2
B04	Binary Output #4
B05	Heating Stage 1
B06	Heating Stage 2

<b>BAC-9311ACE RTU</b>	
<b>Inputs</b>	
AI1	Space Sensor ( <i>on Room Sensor port</i> )
AI2	Space Setpoint Offset ( <i>on port</i> )
AI3/UI3	Discharge Air Temperature
AI4/UI4	Outdoor Air Temp
AI5/UI5	Space Humidity
AI7/UI7	Economizer Feedback
AI8/UI8	Analog Input #8
AI9	Duct Pressure ( <i>internal sensor</i> )
BI6/UI6	Fan
<b>Outputs</b>	
A07/U07	Analog Cooling Output
A08/U08	Analog Heating Output
A09/U09	Economizer Output
A010/U010	Analog Output #10
B01	Fan Start - Stop
B02	Cool Stage 1
B03	Cool Stage 2
B04	Binary Output #4
B05	Heating Stage 1
B06	Heating Stage 2

<b>BAC-9311ACE VAV</b>	
<b>Inputs</b>	
AI1	Space Sensor ( <i>on Room Sensor port</i> )
AI2	Space Setpoint Offset ( <i>on port</i> )
AI3/UI3	Discharge Air Temperature
AI4/UI4	Analog Input #4
AI5/UI5	Analog Input #5
AI6/UI6	Analog Input #6
AI7/UI7	Analog Input #7
AI8/UI8	Primary Damper Position
AI9	Primary Duct Pressure ( <i>internal sensor</i> )
<b>Outputs</b>	
A07/U07	Analog Heat
A08/U08	Fan Speed
A09/U09	Analog Output #9
A010/U010	Analog Output #10
B01	Fan
B02	Heating Stage 1
B03	Heating Stage 2
B04	Heating Stage3
B05	Primary Damper CW
B06	Primary Damper CCW

**NOTE:** See [Sample \(BAC-9311ACE\) Wiring on page 6](#) for more information.

**NOTE:** Universal Input (UIx) terminal = Analog Input (AIx) object or Binary Input (BIx). Universal Output (UOx) terminal = Analog Output (AOx) object.

**NOTE:** Universal (analog) inputs and outputs can be configured to emulate binary (on/off or voltage/no-voltage) objects. They are used with GND terminals.

**NOTE:** Binary Output (BOx) terminals are triacs and are used with SC terminals instead of GND terminals.



## REPLACEMENT PARTS

<b>HPO-0055</b>	Replacement Network Bulb Module for Conquest Controllers, Pack of 5
<b>HPO-9901</b>	Conquest Hardware Replacement Parts Kit

**NOTE:** HPO-9901 includes the following:

<b>Terminal Blocks</b>	<b>DIN Clips</b>
(1) Black 2 Position	(2) Small
(2) Grey 3 Position	(1) Large
(2) Green 3 Position	
(4) Green 4 Position	
(2) Green 5 Position	
(2) Green 6 Position	

**NOTE:** See the **Conquest Selection Guide** for more information about replacement parts and accessories.

## IMPORTANT NOTICES

The material in this document is for information purposes only. The contents and the product it describes are subject to change without notice.

KMC Controls, Inc. makes no representations or warranties with respect to this document. In no event shall KMC Controls, Inc. be liable for any damages, direct, or incidental, arising out of or related to the use of this document.

The KMC logo is a registered trademark of KMC Controls, Inc. All rights reserved.

The KMC Connect Lite™ app for NFC configuration is protected under United States Patent Number 10,006,654. Pat: <https://www.kmcccontrols.com/patents/>.

TEL: 574.831.5250  
FAX: 574.831.5252  
EMAIL: [info@kmcccontrols.com](mailto:info@kmcccontrols.com)

